



PRESSURE/TORQUE CONVERSION CHART

5IBT

PRESSURE/TORQUE CONVERSION CHART

PRESSURE IN PSI	FT. LBS.	N-m
1500	811	1100
1600	866	1174
1800	973	1319
2000	1082	1467
2200	1189	1612
2400	1295	1756
2600	1403	1902
2800	1509	2046
3000	1616	2191
3200	1726	2340
3400	1837	2491
3600	1947	2640
3800	2058	2790
4000	2168	2939
4200	2278	3089
4400	2389	3239
4600	2499	3388
4800	2610	3539
5000	2720	3688
5200	2831	3838
5400	2943	3990
5600	3054	4141
5800	3166	4292
6000	3277	4443
6200	3389	4595
6400	3500	4745
6600	3612	4897
6800	3723	5048
7000	3835	5199
7200	3947	5351
7400	4059	5503
7600	4172	5656
7800	4284	5808
8000	4396	5960
8200	4505	6108
8400	4615	6257
8600	4724	6405
8800	4834	6554
9000	4943	6702
9200	5053	6851
9400	5163	7000
9600	5273	7149
9800	5383	7298
10000	5500	7457

